

Release Tool Set



Special tools for different releasing principles


Introduction

You profit from the high level of functionality as well as from the longevity of our tools made in Germany. Only the best materials are used to produce our products, and CNC-controlled production facilities guarantee the highest level of precision. The perfect mixture of modern technology, know-how, and care guarantees tools that are capable of meeting high demands.

Examples of use


Round connector tool

1. Open secondary lock – position
2. Insert round connector into the releasing channel
3. Use tool (press) – the contact will be ejected and may be removed

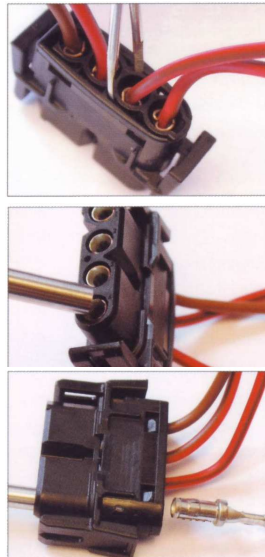

Flat connection tool with 1 snap-in pin


1. Secondary lock closed
2. Secondary lock opened
3. Depress the snap-in pin with our tool
4. Remove released contact from the housing

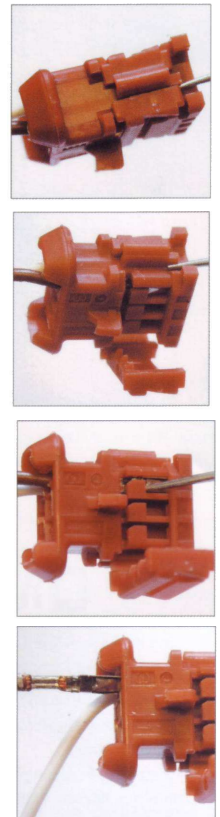




Flat connection tool with 2 snap-in pins


1. Secondary lock closed

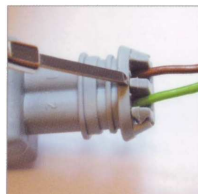


2. Secondary lock opened

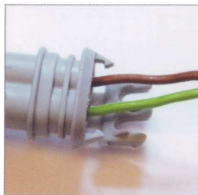

3. Insert flat connection tool into releasing channel – release contact

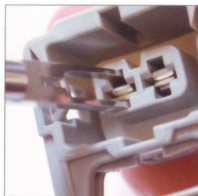

4. Remove released contact from the housing

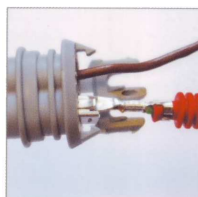

Flat connection tool with 2 snap-in pins – diagonally offset

1. Secondary lock closed




2. Push out secondary lock, possibly remove entirely



3. Insert flat connection tool into releasing channel – release contact



4. Remove released contact from the housing

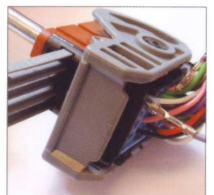

Content

- **99014 Universal tool for JPT and SPT**
All vehicles
- **87035 Pin and socket contact ø2,3mm**
Automobiles: Opel, Renault, Ford
Trucks: Fendt, Mack, Renault, Scania, Volvo
- **88040 Flat connection contact, Junior Power Timer contact 2,8mm**
all Automobiles, trucks, busses
- **88062 Flat connection contact, Pit Pod contact 4,8mm**
Automobiles: BMW, Audi/VW, Ford, Fiat, DC
Trucks/busses: Iveco, MAN, Scania
- **88069 Flat connection contact, Ducon contact, ABS housing 0,8mm**
Automobiles: Divers
Trucks/commercial vehicles: Fendt, Iveco, Mack, MB, Renault, Scania, Volvo
- **89058 Flat connection contact (with 1 snap-in pin), among others Ducon, JT 2,8/5,8mm**
Automobiles: BMW, DC; Opel, VAG among others
Trucks: Fendt, MB
- **89089 Standard Timer 5,8mm, 1 snap-in pin**
- **90028 Flat connection contact (with 1 snap-in pin), Secondary lock 2,8mm**
Automobiles: Diverse
Trucks/busses: Iveco
- **87045 Round connector contact, Pin contact ø3,5mm**
Automobiles: VAG, BMW, Opel
Trucks: Mack, MAN, Renault, Volvo
- **93005 Flat connection contact, Micro Timer II and III contact 1,5mm**
Automobiles: BMW, DC, Opel, Porsche, VAG u. a.
Trucks/commercial vehicles: Fendt

